



Design: Beck Design


freistil  
136

## PROFILE

### TECHNICAL DESIGN

- / Wooden inner frame
- / Spring system: nosag spring
- / Seat in polyurethane foam "density" 37 kg/m<sup>3</sup>, covered with a pad filled with foam fibre mix
- / Back in polyurethane foam, "density" 30 kg/m<sup>3</sup>, covered with a pad filled with foam fibre mix
- / Foot: steel single foot, powder coating jet black RAL 9005

The data of "density" can vary in a range of +/- 10 %

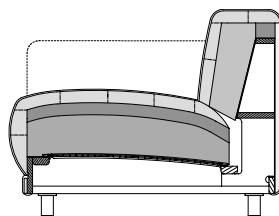

## LEG VERSIONS

Steel single  
foot,  
RAL 9005  
Jet black



## INFORMATION

- / Normal depth or extra-deep models can be connected together at the corner, but not in a straight line.
- / There are more dividing seams in leather covers than in fabric covers. Detailed information about this can be found in the Info section.
- / With velours covers, please note the following points:
  - If models are facing different directions (such as corner seating or a group of armchairs), the pile will lie in different directions. This means it will reflect the light differently and create a different colour impression.
  - Felled seams or piped seams will result in an alley-like appearance in the pile.
  - Shadow effects are created when the fabric is placed with the pile running in a different direction.
  - In the case of seams that run vertically, the fabric colour on one side of the seam may appear lighter than on the other.
- / For ergonomic reasons, only the seat area of model ASS-PSZ – not the leg rest – is sprung. So if the leg rest is used as a seat it will feel much firmer.
- / Repeat and patterned fabrics cannot be processed with this range.
- / The cover material should be particularly soft and have a degree of thickness, due to the special corner stitching. Thin materials (especially fabrics) and materials that are strong along the fibre (leathers in particular) do not produce a harmonious overall appearance.
- / The extra-deep ASS-PSZ model cannot be connected to the normal-depth ASO or ARB-PSZ models.



A high-quality, especially casual upholstery that forms waves/leaves indentations that are typical of the material. This waviness may even occur in new condition.



ASO 136/182 le  
ASS-PSZ 136/139 ri






Design: Beck Design

freistil  
136


## OVERVIEW OF RANGE

### Front view/Top view


Sofa in widths: 183, 203, 223, 243 cm




SOB 136/183




SOB 136/203

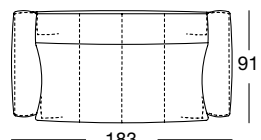


SOB 136/183

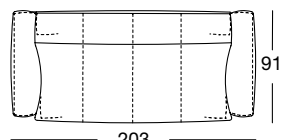


SOB 136/203




SOB 136/223



SOB 136/243

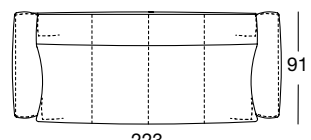

SOB 136/223

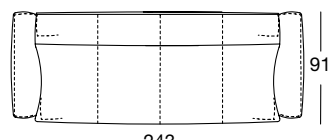


SOB 136/243

## OVERVIEW OF RANGE


### Front view/Top view

Sectional sofa in widths: 162, 182, 202 cm




ASO 136/162 le

ASO 136/162 ri

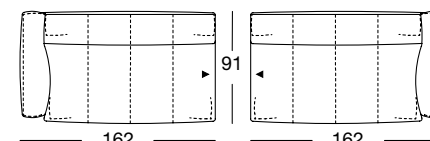


ASO 136/162 le

ASO 136/162 ri



ASO 136/182 le

ASO 136/182 ri

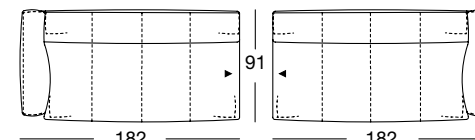

ASO 136/182 le

ASO 136/182 ri




Design: Beck Design

freistil  
136

## OVERVIEW OF RANGE


### Front view/Top view

Sectional sofa in widths: 162, 182, 202 cm



ASO 136/202 le


ASO 136/202 ri

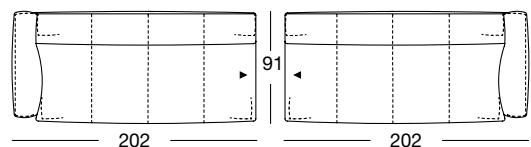

ASO 136/202 le


ASO 136/202 ri

Corner sectional sofa: 242 cm



E-ASO 136/242 le

E-ASO 136/242 ri

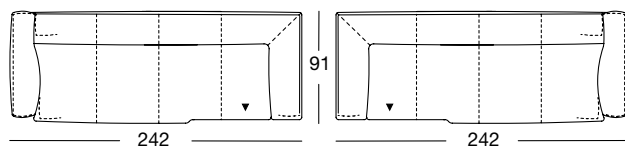


E-ASO 136/242 le

E-ASO 136/242 ri

## OVERVIEW OF RANGE


### Front view/Top view

Closing chair with fixed footstool: 119 und 139 cm




ASS-PSZ 136/119 le

ASS-PSZ 136/119 ri

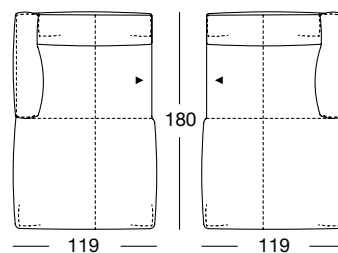


ASS-PSZ 136/119 le

ASS-PSZ 136/119 ri



ASS-PSZ 136/139 le

ASS-PSZ 136/139 ri

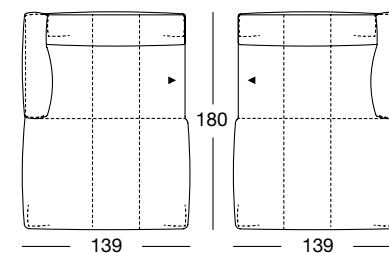

ASS-PSZ 136/139 le

ASS-PSZ 136/139 ri




Design: Beck Design

freistil  
136


## OVERVIEW OF RANGE

### Front view / Top view


Closing chair with armrest XL in widths: 119 and 139 cm




XL-ASS-PSZ 136/119 le XL-ASS-PSZ 136/119 ri



XL-ASS-PSZ 136/139 le XL-ASS-PSZ 136/139 ri

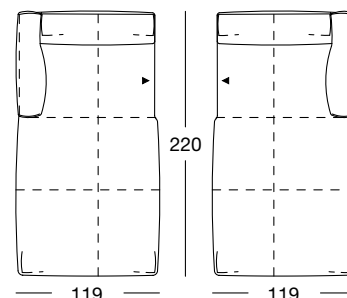

XL-ASS-PSZ 136/119 le XL-ASS-PSZ 136/119 ri

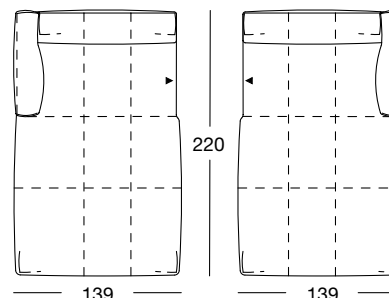


XL-ASS-PSZ 136/139 le XL-ASS-PSZ 136/139 ri


## OVERVIEW OF RANGE

### Front view / Top view

Sectional bench with footstool: 164 cm




ARB-PSZ 136/164 le ARB-PSZ 136/164 ri

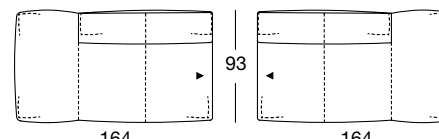


ARB-PSZ 136/164 le ARB-PSZ 136/164 ri

Footstool: 104 x 74 cm




PB 136/104 x 74




PB 136/104 x 74

Pouf in one width: 71 x 71 cm




Pouf 136/71




Pouf 136/71

### Front view / Top view


#### Cushions




BI-RUK 136/60 x 40



BI-RUK-RO 136/80

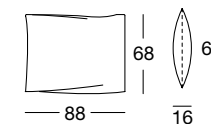

BI-KI-MA 136/88 x 68



POK 136/35 x 35




Design: Beck Design

freistil  
136


## OVERVIEW OF RANGE

### Side views


Normal depth

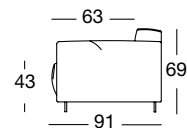

SOB 136/183




ASS-PSZ 136/119



PB 136/104 x 74

Extra depth

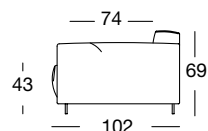

UE-SOB-ASO 136

## EXAMPLES OF COMBINATIONS

Examples of combinations are not shown to scale.

